


Dear 680b Customer:

For 680b customers who ordered the 680b units prior to the announcement of the 680b Baudot option we would like to make a special offer to you. By returning this letter with your remittance and a copy of the packing slip for your 680b you may purchase the 680b Baudot Conversion PROM Kit for only \$42.00 plus \$1.00 postage & handling.

As a thank you for being so patient in this matter we are enclosing the programming manual for the 680b unit. This item will not be included as part of the kit in the future and will be available as an option for \$10.00. The part # will be in the 680b Programming Manual.

Good Luck in your kit building	
Name(Order #
I wish to order the Baudot Conversion	on PROM Kit for \$42.00.
Included is \$42.00 plus \$1.00	for postage and handling.
Here is my MC or BAC #, please	charge \$43.00 to my account



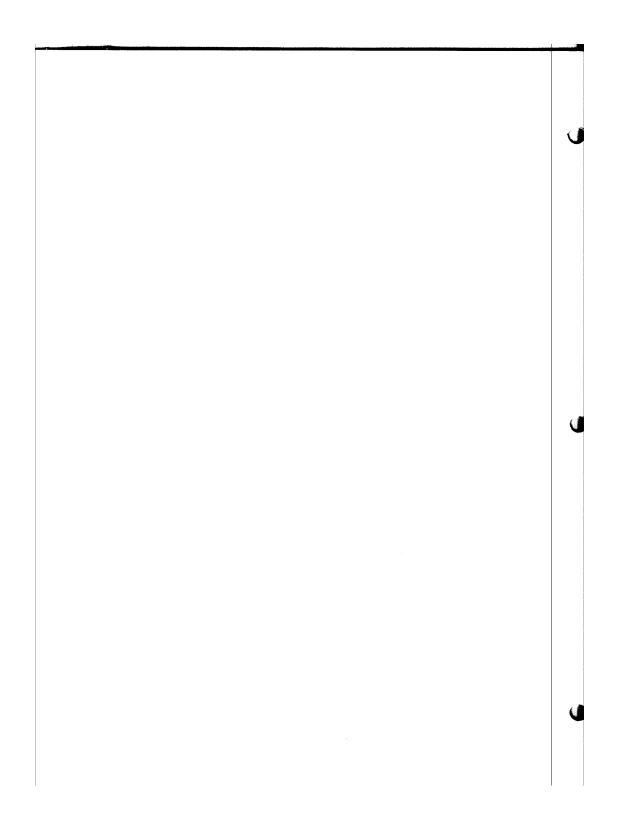



Theory of Operation altair 680b

Table of Contents

1.	680b SYSTEM OVERVIEW	pa	ge	3
H.	PC BOARD SCHEMATICS	pa	ge	5
	Sheet 1 - MPU and Clock Circuitry Sheet 3 - Memory Circuitry Sheet 2 - Power Supply and I/O Interface Circuitry Sheet 4 - Display/Control Board Circuitry			
III.	680b SYSTEM TIMING	pa	ge	11
īV.	TROUBLESHOOTING AIDS FOR THE 680b	pa	ige	17
v.	PIN CONFIGURATIONS	pa	ge	20



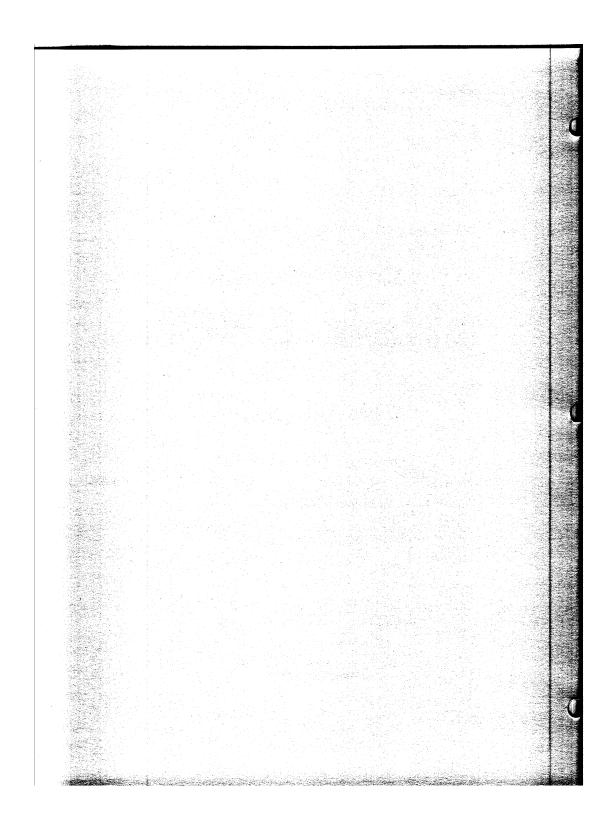

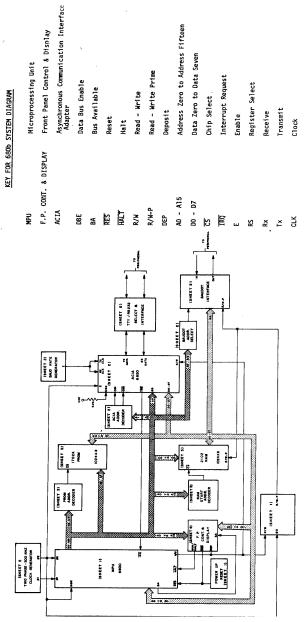

680 SYSTEM DIAGRAM

M DIAGRAM

	l i	

I. 680b SYSTEM OVERVIEW

CLOCK: The system clock is a 500 KHz asymmetrical, two phase, non-overlapping clock that runs at the vcc voltage level. Phase one (Ø1) is used for internal chip operations. All data transfers take place during Phase two (Ø2). Therefore, Ø2 is used throughout the system to enable memory and interfaces such as the Asynchronous Communication Interface Adapter (ACIA).

DATA BUS: The eight-bit, bidirectional data bus of the 6800 MPU operates at standard TTL levels and is capable of directly driving one standard TTL load and 130pF. The 680b system implements the use of 74367 (8T97) tri-state buffers to provide a drive capability of 20 standard TTL loads, greatly enhancing the expansion capabilities of the Altair 680b system.

ADDRESS BUS: The sixteen bit, bidirectional address bus of the 6800 MPU operates at standard TTL levels and is capable of directly driving one standard TTL load and 130pF. The bus is split two ways. One section is tied directly to the Front Panel and peripherals, and the other is CMOS buffered just prior to the memory section (RAM and PROM) of the system.

SYSTEM CONTROL BUS

The System Control Bus consists of the following signals:

RESET: This input is used to initialize the system after a power down condition due to either an initial start-up or power failure. It is also used to reinitialize the MPU at any time after start up. When a positive edge is detected on the RESET input, which is caused by a manual front panel reset, the MPU will begin the restart sequence. Within the restart sequence, the Program Counter is loaded with the contents of the reset vector location (FFFE,FFFF), which contains the starting address of the System Monitor.

HALT: The Halt line is used for external control of program execution. When in the high state (RUN), the MPU will fetch the instruction addressed by the program counter and begin program execution. When the Halt line is low, all of the activity within the MPU will be halted. The Bus Available (BA) signal will then go high and the Read-Write (R/W), Address and Data lines will all be in the high impedance state. With BA high, the front panel addressing and data deposit functions will be enabled.

R/W: Read/Write controls and indicates the direction of data transfer. When in the high state (READ), data is read into the MPU from memory and peripherals. When in the low state (WRITE), data is written into memory or peripherals. When the processor is halted, R/W will turn to the off (high impedance) state.

- VMA: The VMA output indicates to peripheral devices, such as the ACIA, a stable, valid memory address on the bus.
- DBE: The DBE input is the three-state control signal for the MPU data bus and will enable the bus drivers of the 6800 when in the high state. Phase 2 is used to directly drive this input. During an MPU read cycle, the data bus drivers are disabled internally, i. e., within the MPU.
- R/W-P: Read/Write-Prime is developed by NANDing the Read/Write signal and Ø2. The Read/Write-Prime signal assures that data will always be read or written while the data bus is enabled and not during periods of invalid data.
 - BA: When the MPU Halt line is high, the microprocessor is running and the Bus Available (BA) line is low indicating that the data and address busses are not available for external control. When the Halt line is in the low state (MPU halted), the BA line is high signifying that the busses are available. This signal is used in the 680b to enable the front panel addressing and data deposit functions.
 - TSC: The Three-State Control input causes all address lines and the R/W line to go into the high impedance or off state. (This occurs 500 ns after TSC=2.4V). The Bus Available and Valid Memory Address signals will be forced low. TSC is used in Direct Memory Access applications.

II. PC BOARD SCHEMATICS

SHEET 1 - MPU and Clock Circuitry

The two inverters ZZ (pins 12 and 13) and ZZ (pins 10 and 11) comprise an astable multi-vibrator that oscillates at the crystal frequency of two megahertz. Inverter ZZ (pins 3 and 4) serves to improve the rise and fall times of the square wave and drives J-K flip flops TTa and TTb. J-K flip flops TTa and TTb (functioning as a synchronous Johnson Counter) and four NOR gates generate the appropriate timing for Øl and Ø2. With a divide factor of four, this circuit produces a clock frequency of 500 KHz. Phase 1 is high for 600 ns and low for 1.4 μs . Phase 2 is high for 1 μs and low for 1 μs . Transistors Q4 and Q5 serve to pull the clock signals up to the proper logic levels required by the microprocessor system.

Transistors Q2 and Q3 and their associated passive components (R10, R11, R12, C6) provide the power-up reset signal. Upon initialization of power, Q3 is off (zero volts across C6) and Q2 is holding RES low. When C6 charges to approximately 0.7 volts, Q3 will turn on pulling the base of Q2 low. This causes Q2 to turn off and ends the power-up reset sequence. The collector of Q2 is OR-tied to the control board for front panel reset capability.

The data bus (DO-D7) is connected directly to the front panel via the bus. However, the data bus is buffered through WW, XX, and YY (74367's) before being channelled to memory or peripheral devices. The R/W signal is used to complementarily enable the input or output buffers while tri-stating the ones that are disabled.

The address bus is connected directly to the front panel address lines and CMOS buffered by 4050 non-inverting buffers (CC, R, S) before connection to memory.

Inverter ZZ (pins 1 and 2) is used to develop an inverted Read/Write signal which is gated with $\emptyset 2$ and NAND gate M. The output of M (pin 12) is a proper level Read/Write signal that occurs coincident with $\emptyset 2$. This signal is termed Read/Write-Prime (R/W-P) and is used to control the direction of data transfer in all memory and peripheral interfaces.

SHEET 3 - Memory Circuitry

RAM LOCATION SELECT:

Integrated circuits AA (74LS30) and BB (4449) along with their jumpers (1-6) are used to place the 1K (1024 bytes) of random access memory supplied with the Altair 680b at any desired memory address location.

When the computer memory is expanded past the initial 1K, it may be desireable to locate the original 1K of memory at a different memory address location. For example, if an 8K memory board is added, the original 1K can be located at starting address zero with the 8K board beginning at address location 1024. Or the 8K board can be located at starting address zero with the original 1K beginning at address location 8192. Depending upon the amount of additional memory, the original 1K block may be located with any starting address from address location zero to location 64,512.

PROM SELECT:

Integrated circuits HH (74LS04), FF, EE, DD (74LS20) and GG (74LS02) are used to select one of the four 256-byte PROM locations at a time. The PROMs are arrayed in a 256 x 8 configuration and are, therefore, selected individually. PROM 1 is at the highest location (FF00) and contains the 680b System Monitor along with the reset and interrupt vectors.

SHEET 2 - Power Supply and I/O Interface Circuitry

The eight input NAND gates along with inverters VV and $\mathbf{M}\mathbf{M}$ comprise the address decoding logic for the 680b's interfaces, i. e., the ACIA and the Baudot interface.

When the address F000 or F001 is presented to this logic circuitry and the address lines are stable (as indicated by the VMA signal), the NAND gates LL and UU will be enabled. LL in turn provides the proper logic level (i. e., zero) to CHIP SELECT TWO (CS2) of the ACIA chip for selection. UU (pin 8) presents a logic level zero to inverter MM (pin 13). The output of MM (pin 12) provides the proper logic level (i. e., one) to CHIP SELECT ONE (CS1) of the ACIA. The proper selection levels for CS1 and CS2 occur simultaneously.

The Address Zero (AO) line is tied directly to the Register Select (RS) input of the ACIA (pin 12). When the ACIA is selected and the AO line is at a logic level one (placing a high level on the ACIA RS input), the Transmit/Receive Data Registers are selected. When the ACIA is selected and the AO line is at a logic level zero (placing a low level on the ACIA RS input), the Control/Status Registers are selected.

The MPU R/W signal line is connected directly to the ACIA R/W line (JJ, pin 13). The R/W signal from the MPU controls the direction of data transfer out of the ACIA to peripherals on a WRITE signal and into the ACIA from peripherals on a READ signal. All data transfers within the computer system occur on $\emptyset 2$, therefore, the ACIA ENABLE input (JJ, pin 14) is tied directly to $\emptyset 2$.

The $\overline{\text{IRQ}}$ (JJ, pin 7) output is tied directly to the MPU's $\overline{\text{IRQ}}$ input (NN, pin 4). The ACIA's $\overline{\text{IRQ}}$ is an active low output that is used to interrupt the MPU and remains low as long as the cause of the interrupt is present and the appropriate interrupt enable within the ACIA is set (see Programming Manual).

To control the rate of data transfer in and out of the ACIA, a baud rate generator is used. Integrated circuit Z is a Fairchild Programmable Bit Rate Generator, implementing a 2.4576 MHz crystal. The output of Z (pin 10) is used to drive the Receive (ACIA, pin 3) and the Transmit Clock (ACIA, pin 4) inputs of the ACIA.

The programmable inputs of the Programmable Bit Rate Generator are labelled 0, 1, 2, and 3. They are located directly to the left of integrated circuit $\mathsf{Z}.$

In direct juxtaposition to these inputs is a ground plane and an adjacent (to the left) +5 volt plane. The inputs to the Baud Rate Generator are programmed by either connecting them to the ground plane (L) or to the +5 volt plane (H). The following table is the truth table for these rate select inputs.

0	1	2	3	OUTPUT RATE Z-PIN 10	
L	Н	L	L	50 Baud	
Н	Н	L	L	75 Baud	
L	L	Н	L	134.5 Baud	
Н	L	н	L	200 Baud	
L	Н	н	L	600 Baud	
Н	н	н	L	2400 Baud	
L	L	L	Н	9600 Baud	
Н	L	L	н	4800 Baud	
L	н	L	Н	1800 Baud	
н	Н	L	н	1200 Baud	
L	L	н	Н	2400 Baud	
Н	L	н	н	300 Baud	
L	н	н	н	150 Baud	
Н	Н	Н	н	110 Baud	

TRUTH TABLE FOR RATE SELECT INPUTS

Assuming a crystal frequency of 2.4576 MHz, the actual output frequency of the Bit Rate Generator is 16 times the indicated output rate. For example, with a programmed output of 9600 baud, the actual frequency that is supplied to the ACIA becomes 16 x 9.6KHz or 153.6KHz. The frequency becomes 16 x 110 or 1760 Hz with a programmed output of 110 baud.

The ACIA (JJ) has a Request To Send (\overline{RTS} ; JJ, pin 5) output which enables the MPU to control a peripheral device via the data bus. If the \overline{RTS} output is low (the active state), the output signal is fed through a 20 ma loop interface for use in controlling a paper tape reader for an ASR-33 Teletype. For more information on the use of the \overline{RTS} signal in programming, consult the 680b Programming Manual.

Both the Tx DATA (transmit) and Rx DATA (receive) signal lines are connected directly to circuitry used to interface with either 20 ma TTY or RS-232 equipped peripherals. Only one such device may be used at a time. If a Teletype (20 ma loop) is connected, then an outgoing signal is presented to the input of inverter A (pin 3) and fed to the base of Q200. Q200 is biased to provide a 20 milliamp current loop necessary for proper TTY operation. When a TTY signal is inputted to E2 and E3, the signal is buffered through inverter A and fed to the Rx DATA (JJ, pin 2) input of the ACIA.

When the Baudot interface option is chosen, the ACIA (JJ) will not be used. This is because the Motorola ACIA is programmable to seven or eight bits and the Baudot interface requires a five level (or five bit) code. Therefore, in this system the serial data is clocked into and out of the system by using D-type flip-flops. Data is serially fed to the Buffered Data Zero (BDO) line upon input. The serial-to-parallel conversion occurs within the MPU itself. Upon data output, the MPU converts its parallel data to serial data which is then fed via the BDO line to the Baudot interface circuitry.

When the Baudot interface circuitry is addressed at memory address location F002, the outputs of gates KK and LL (pin 8) are driven low. These outputs cause the outputs of inverters X (pins 10 and 12) to go high, which in turn feed NAND gate Y (pins 1 and 2) and drive its output (pin 3) low. After inversion by X (pins 3 and 4) the current high level signal is used to enable one leg of three-input NAND gate M (pin 11). Pin 10 of M is driven high (on a Write signal) by the inverted Read/Write-Prime signal. The output of M is pulled to a logic level zero when Ø2, which is fed to M (pin 9), is high. When the MPU is in the Run mode, both the Clear (CLR) and Preset (PR) inputs of D-type edgetriggered flip-flop La are high. This permits the data transfer to take place when Ø2 returns to a logic level zero, causing the Clock (C) input of flip-flop La to go high. The Q output of La (pin 9) is fed to the Baudot driver interface circuitry.

To affect a Read operation from data entering the Data (D) input of flip-flop Lb (pin 2), data is first buffered by inverter A (pins 5 and 6). Data will be set at the Q output of Lb (pin 6) on the rising edge of 01 and will remain until an input datum change occurs. This change must occur before the rising edge of the next 01 pulse. When a start bit [high following inversion by A (pins 5 and 6)] is fed into D (pin 2) of Lb, it will cause the Q output to go low as 01 triggers the clock. Since the Q output is directly connected to the Interrupt Request (\overline{IRQ}) line, an interrupt will occur in the MPU (if the mask bit is not set). The MPU will then be ready to accept data from the Baudot interface circuitry. Subsequent data will be clocked-in with 01 and held during 02 when the data bus is enabled. The data will be driven onto the data bus via buffer RR (pins 11 and 12) which is enabled when location FOO2 is addressed and a Read operation is taking place.

Integrated circuit RR (74367) is a tri-state buffer used for hardware bit programming (see 680b Operator's Manual). The enable lines for RR (pins 1 and 15) are pulled low (active state) whenever the processor addresses location F002 and a Read operation is taking place.


This occurs when:


-]) The monitor checks to see if there is a terminal other than the front panel being used for ${\rm I/O}$ implementation.
- 2) Software initializes an ${\rm I/O}$ port to check for the number of stop bits being used.
 - 3) Software checks to see if there is a Baudot terminal attached.


SHEET 4 - Display/Control Board Circuitry

Address selection occurs in the normal open state of switches S1 through S16 at which time the indicator LED will light. This will occur, however, only when Bus Available (BA) is high. This prevents the front panel switches from having any effect upon the address lines while the MPU is in the Run mode. The Data switches (S17 through S24) operate exactly the same as the Address switches, except that the Data switches are enabled by the Deposit single-shot La (pin 13) and BA. The Deposit switch, via single-shot Lb (pin 5), pulls the R/W line low for a Write operation. The Reset switch triggers single-shot Kb (pin 9). The output of Kb (pin 5) holds the Reset line of the MPU low for a minimum of eight clock cycles.


When the Run switch is actuated, single-shot Ka is enabled making the Halt line high, thus activating the MPU. Ka is retriggered by $\emptyset 2$ which allows the output to remain high until a Halt is initiated.

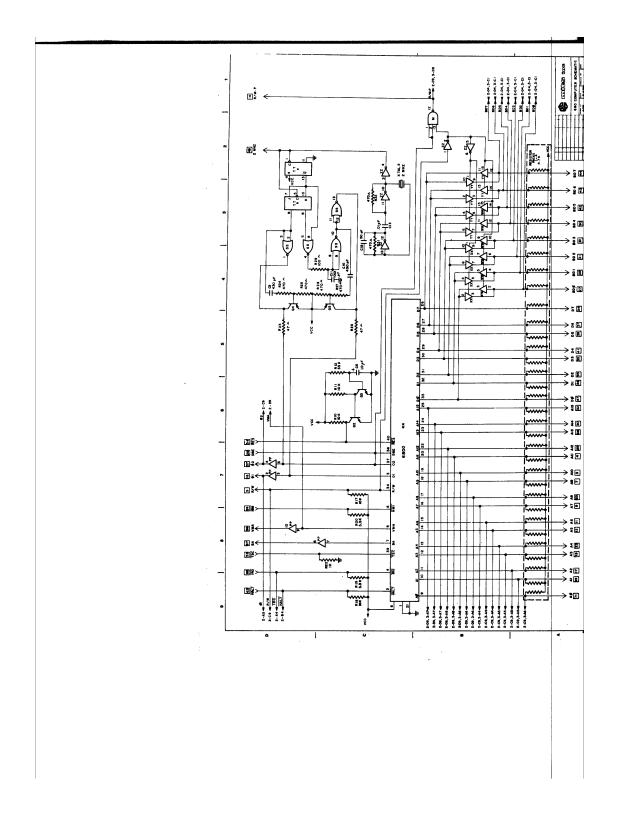


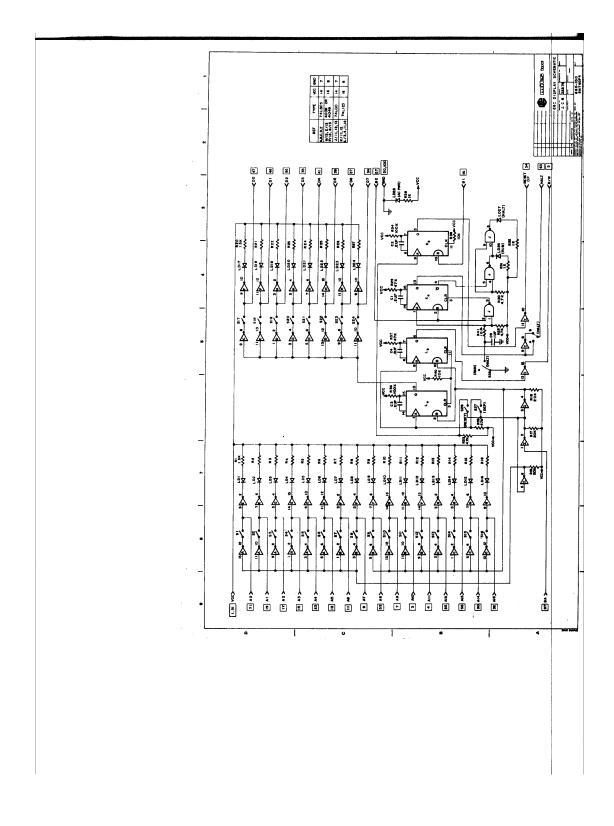


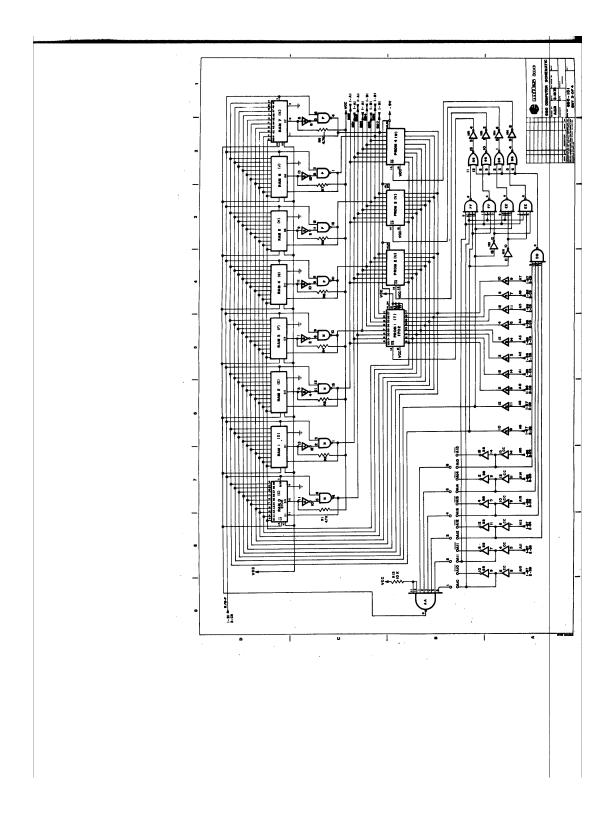



T.			1

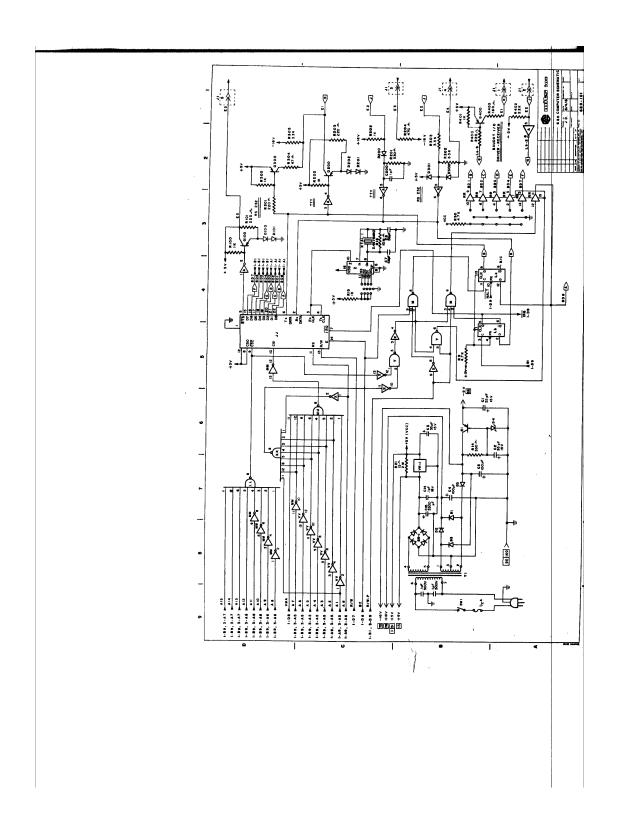

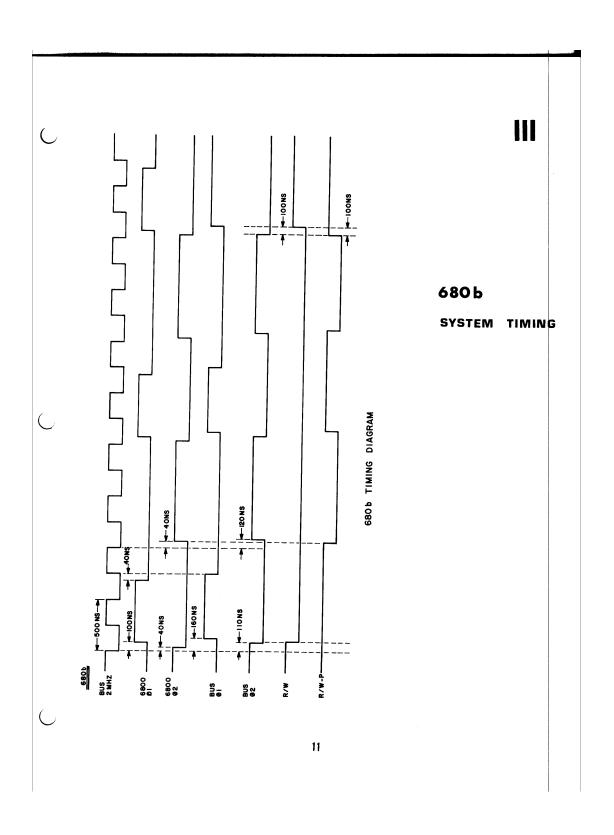

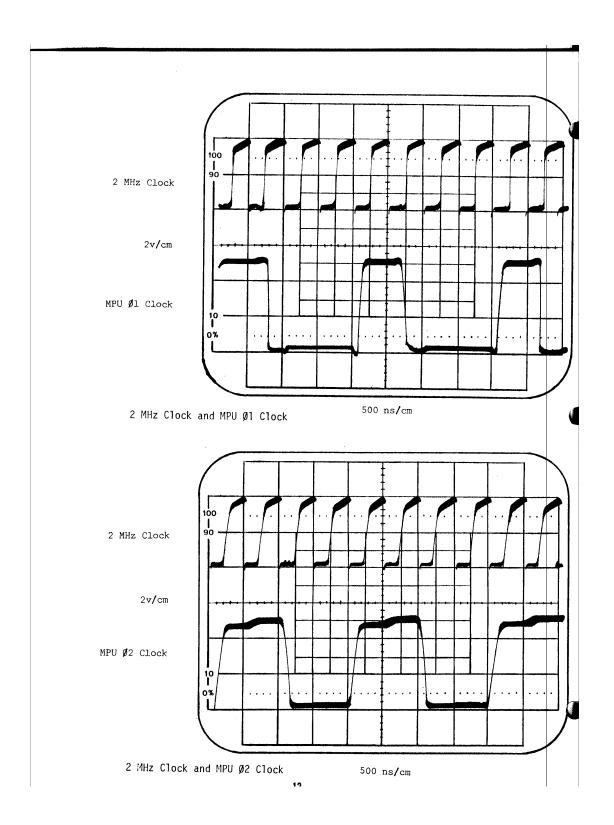

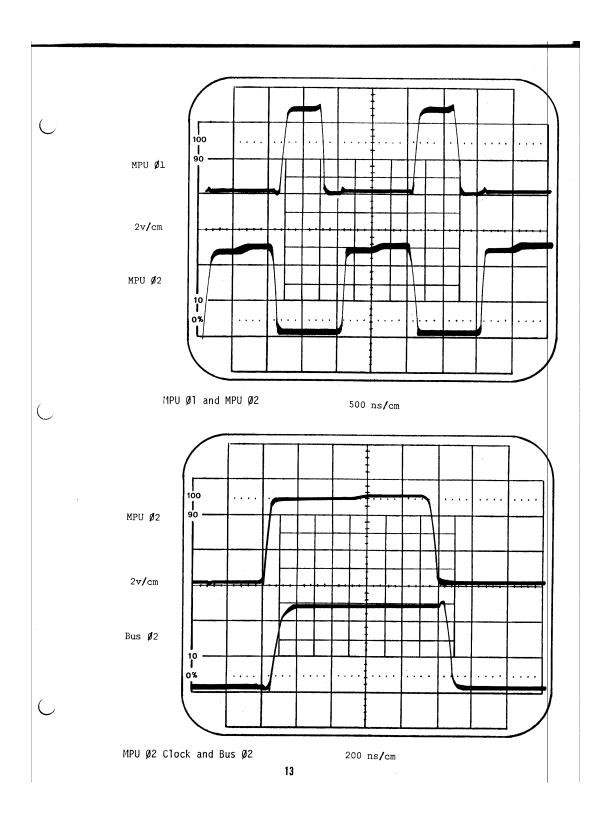

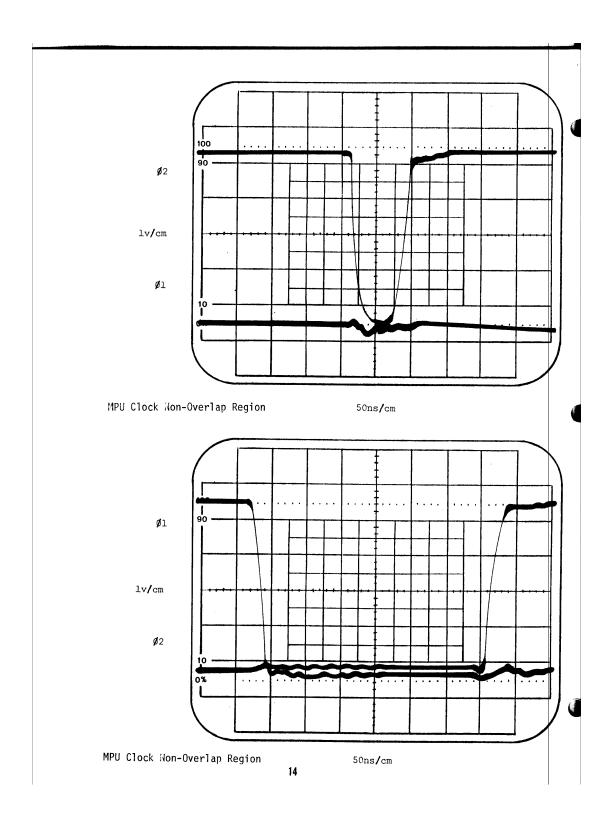



$\underline{E} \ \underline{R} \ \underline{R} \ \underline{A} \ \underline{T} \ \underline{U} \ \underline{M}$


Altair 680b Computer
THEORY OF OPERATION MANUAL

Page 15

The waveforms shown on page 15 of the Altair 680b
Theory of Operation Manual have been labelled incorrectly.
The waveform diagram labelled "READ/WRITE During WRITE
Cycle" should be labelled "READ/WRITE PRIME During WRITE
Cycle" and vice versa.

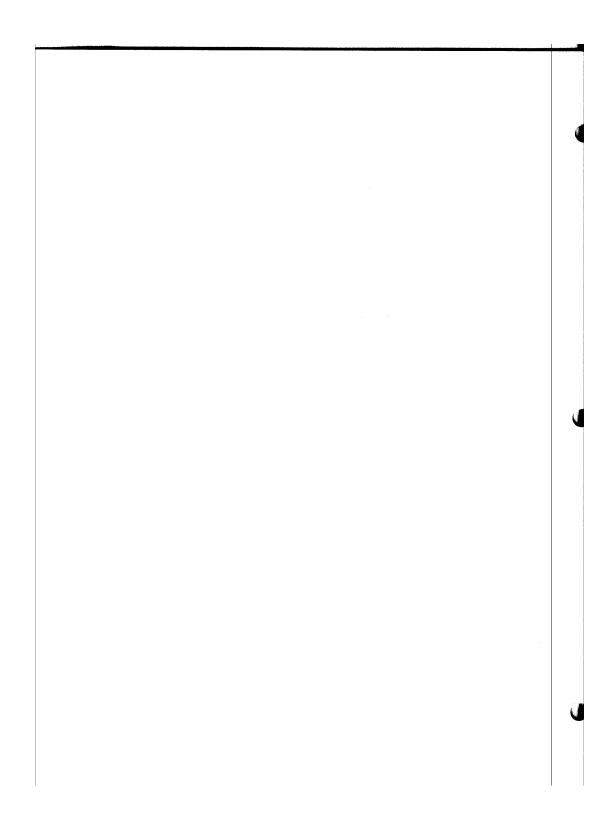

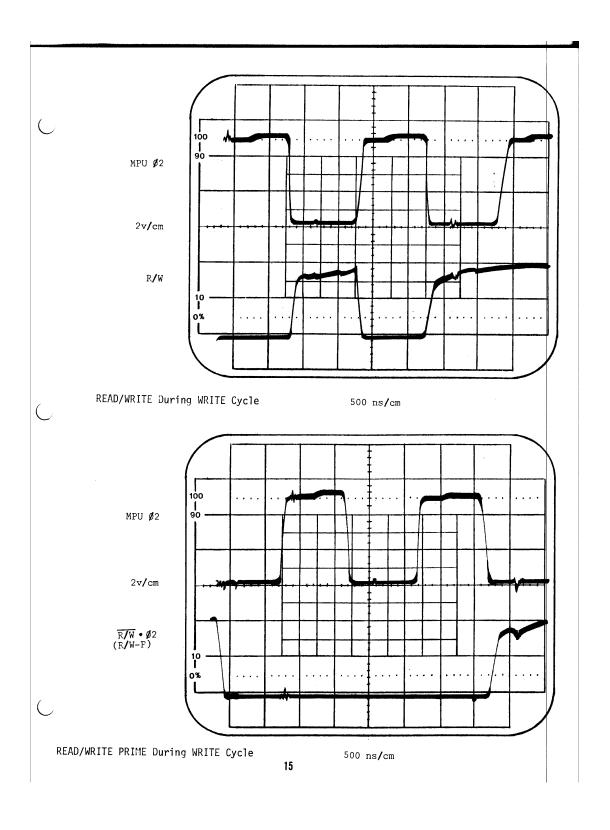

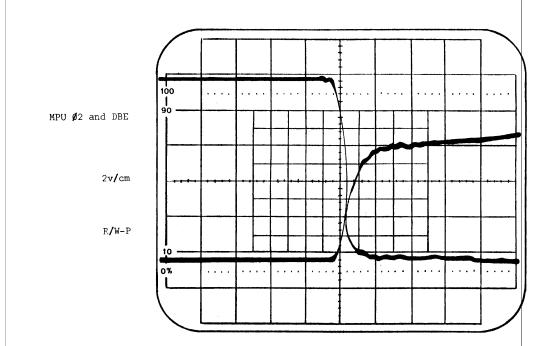

READ/WRITE PRIME going high as Ø2 and DBE go low, disenabling the data bus and preventing data from being written during invalid period.

50ns/cm

IV. TROUBLESHOOTING AIDS FOR THE 680b

A. General Guide

- Troubleshooting TTL Logic
 Keep in mind the D. C. levels for TTL logic. A valid logic 0 is
 between -0.6v to +0.8v. A valid logic 1 is between +2.2v and +5.5v.
- 2. The first steps of troubleshooting the 680b are:
 - a. Identify the problem(s).
 - b. Check power supply voltages. (Wrong voltages can cause many strange effects).
 - c. Isolate and repair the problems one at a time. Don't let the presence of several problems cause confusion.
- Digital electronics is logical. If there is a situation that is not logical, you have isolated the problem or the information you have is incorrect or incomplete.

B. Specific Problems


- 1. Front Panel Display Board
 - a. If multiple LEDs turn on or off together with the actuation of only one of the appropriate switches, check for a solder bridge. These are especially common near the inputs and outputs of ICs A, B, C, D, E, F, G, and H.
 - b. Be sure that the HLT jumper is soldered to pad A and $\underline{\mathsf{not}}$ pad B.
 - c. If erroneous data is continually written into memory when actuating the RUN-HALT switch, be sure that R_{41} and C_{9} are correctly installed. Check to see that the land beneath R_{41} has been cut so that current flows through the resistor and is not shunted by the land.

d. If one of the LEDs will not light, check the function of its integrated circuit driver, (ICs E, F, G, H). Be sure that the output is the complement of the input since these drivers are inverters.

2. Main Board

- a. If unit is completely inoperative, (i. e., LEDs will not light), check power supply voltages. There should be +5 vdc at the plus side of C₃ (output of VR-1). The emitter of Q1 (TIP-30) should supply -9 vdc. If the outputs of these devices do not supply the proper voltages, check the input voltages. If these are non-existent, check the outputs and inputs of the appropriate bridge rectifiers and be sure that the transformer lines are correctly attached to the main board connector.
- b. If the Front Panel LEDs are all illuminated, yet no operations (addressing and depositing data) can be implemented, one of the system clock signals may be faulty. Check the following signals at their respectively designated locations:
 - 1) Phase 2 should appear at NN (pin 37); if it is non-existent, check:
 - a) ZZ (pin 3); if no 2MHz square wave appears, either C12 is not 50pf, R31 and R32 are not 470 ohm, C13 is not .01 μ f, the crystal is bad, or ZZ (74LS04) is not functioning properly.
 - b) ZZ (pin 4). If the 2MHz clock appears at ZZ (pin 3), then it will appear at ZZ (pin 4) if ZZ is not faulty or if it is not shorted to another signal line.

- c) The 1 MHz clock at TT (pin 13).
- d) The 500 KHz clock at TT (pin 9) and its complement at TT (pin 8).
- e) Q4 and Q3. If these are improperly installed, drastically distorted clock waveforms will be supplied to the MPU and other system devices.
- c. If actuation of the Deposit switch fails to change the status of the DATA LEDs (that is, if the switches display data different from the LEDs), check to be sure that YY and XX (pin 1) are pulled low with actuation of DEPOSIT switch. ZZ (pins 1 and 2) and ZZ (pins 5 and 6) could be faulty if this does not occur. Also check to see if JJ (Pin 13) is pulling the R/W line low. This would indicate a faulty ACIA.
- d. If all DATA LEDs stay lit continuously, check jumpers one through six to be sure that they are correctly connected for the desired RAM starting address. Details on proper connection are given in the Operator's Manual.
- e. If one bit at a particular address location consistently will not deposit data, it is likely that a RAM is bad.
- f. If the I/O section of the computer is completely inoperative, check that:
 - 1) The proper baud rate has been selected.
 - 2) XTAL 1 is functioning.
 - All of the proper control signals (i. e., R/W, E and RS) are reaching the ACIA.
 - 4) The proper I/O interface circuitry has been selected.
 - 5) The proper User Programmable Bits have been selected.

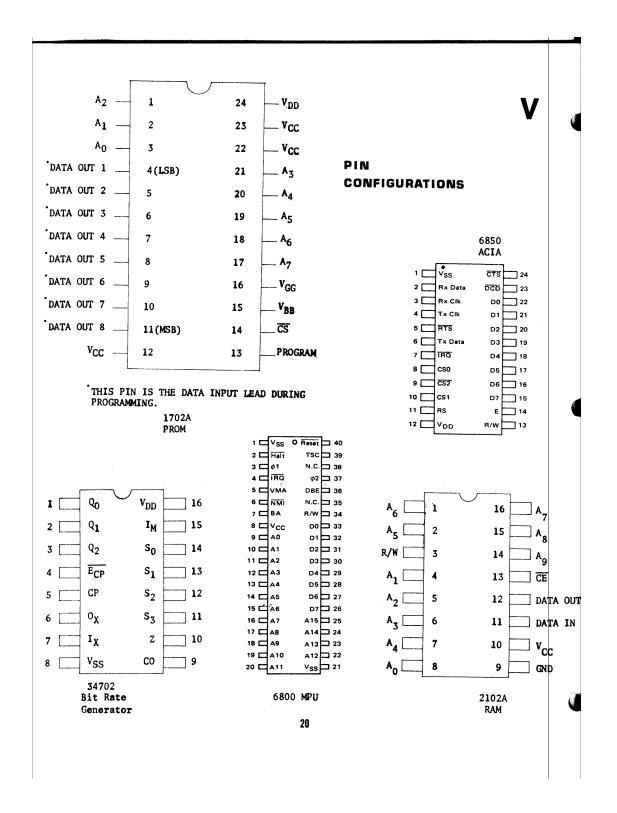

C	



2450 Alamo SE Albuquerque, NM 87106